


 


 

 
1

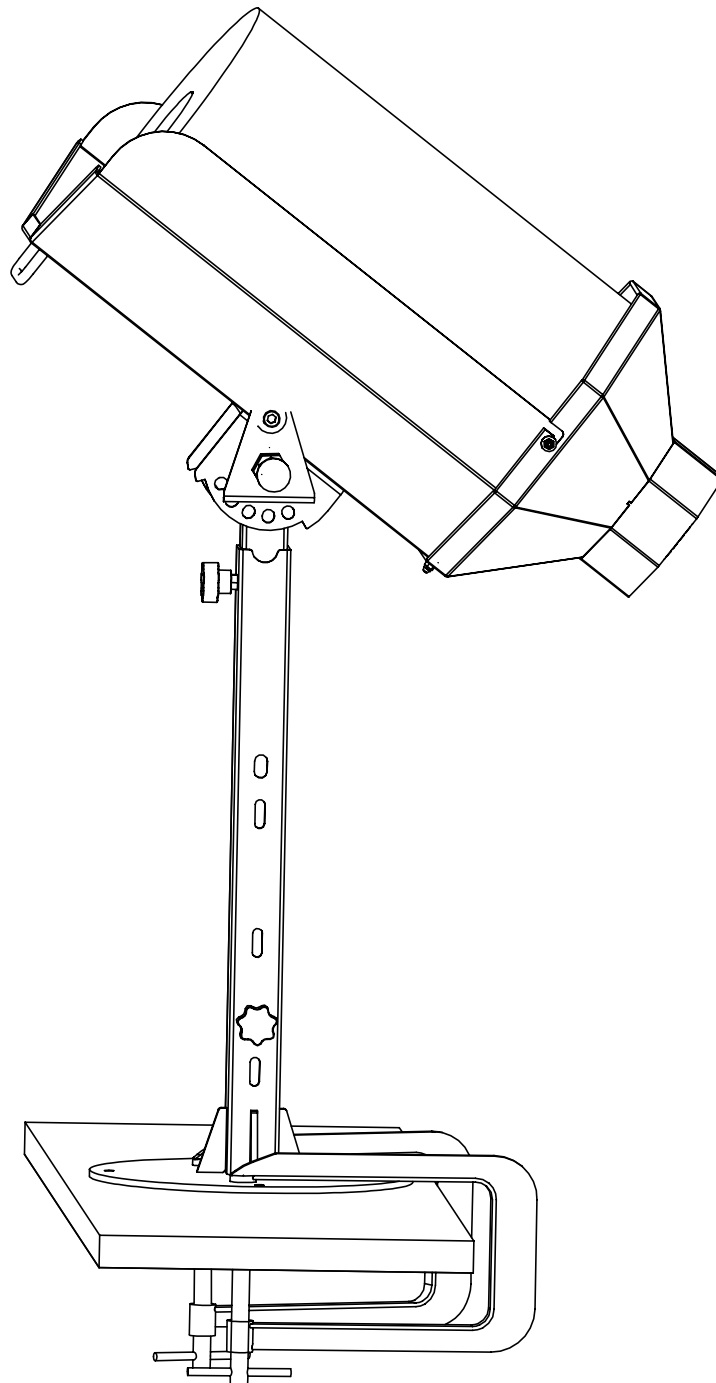


LP-VM2 Manual Paper Cushion Machine




2

①	 M8X20	x2
②	 6mm	x1
③	 3mm	x1
④	 M4	x3
⑤	 M4	x3
⑥	 7mm	x1


3

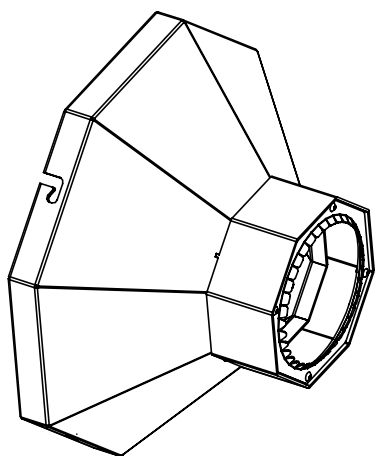


A 1x

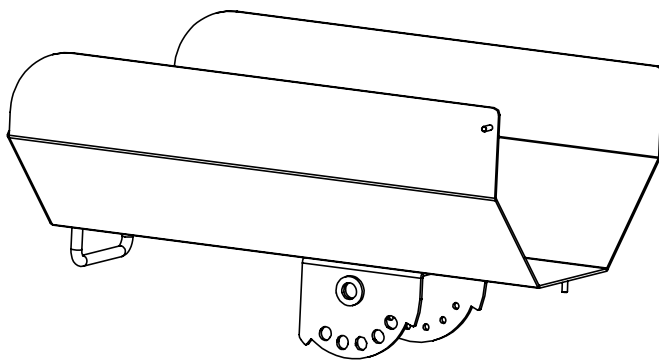


B 1x

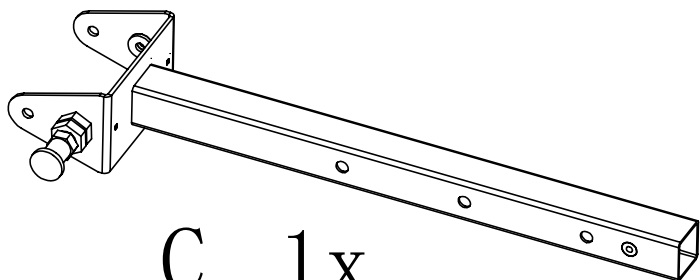


C 1x

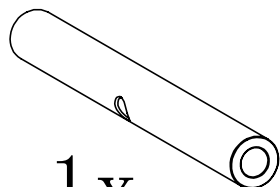


E 1x

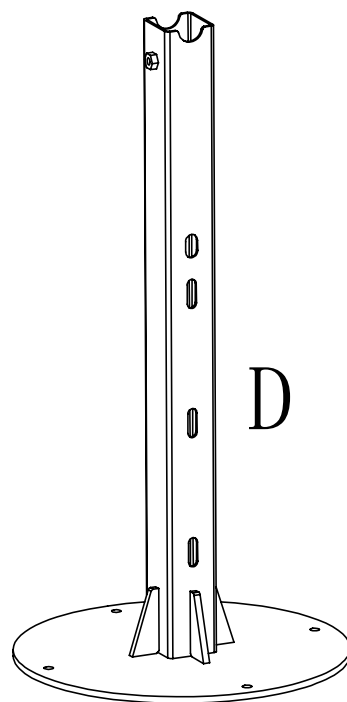

D 1x

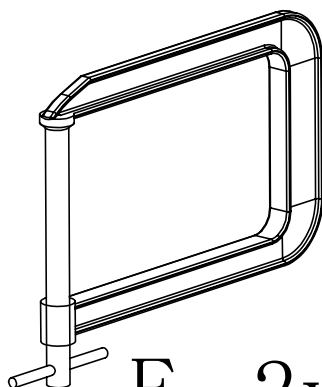


F 2x

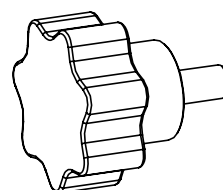


G 3x

4

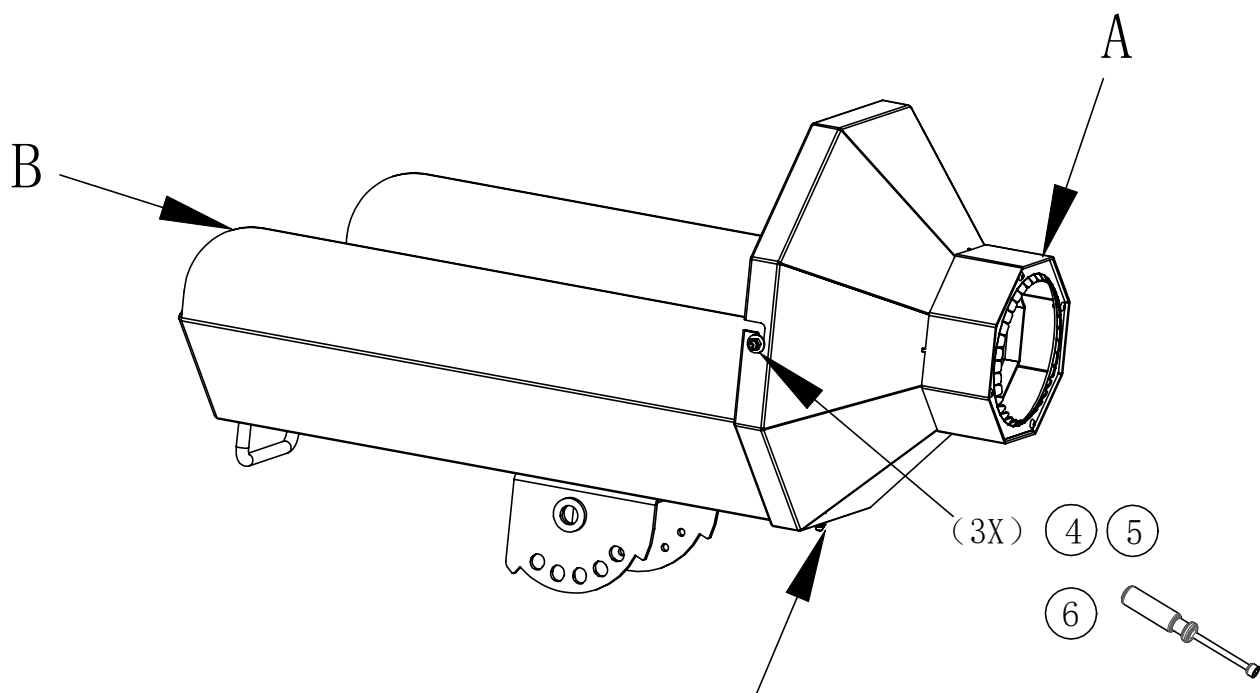

Tighten the bottom nut first,
then the other two

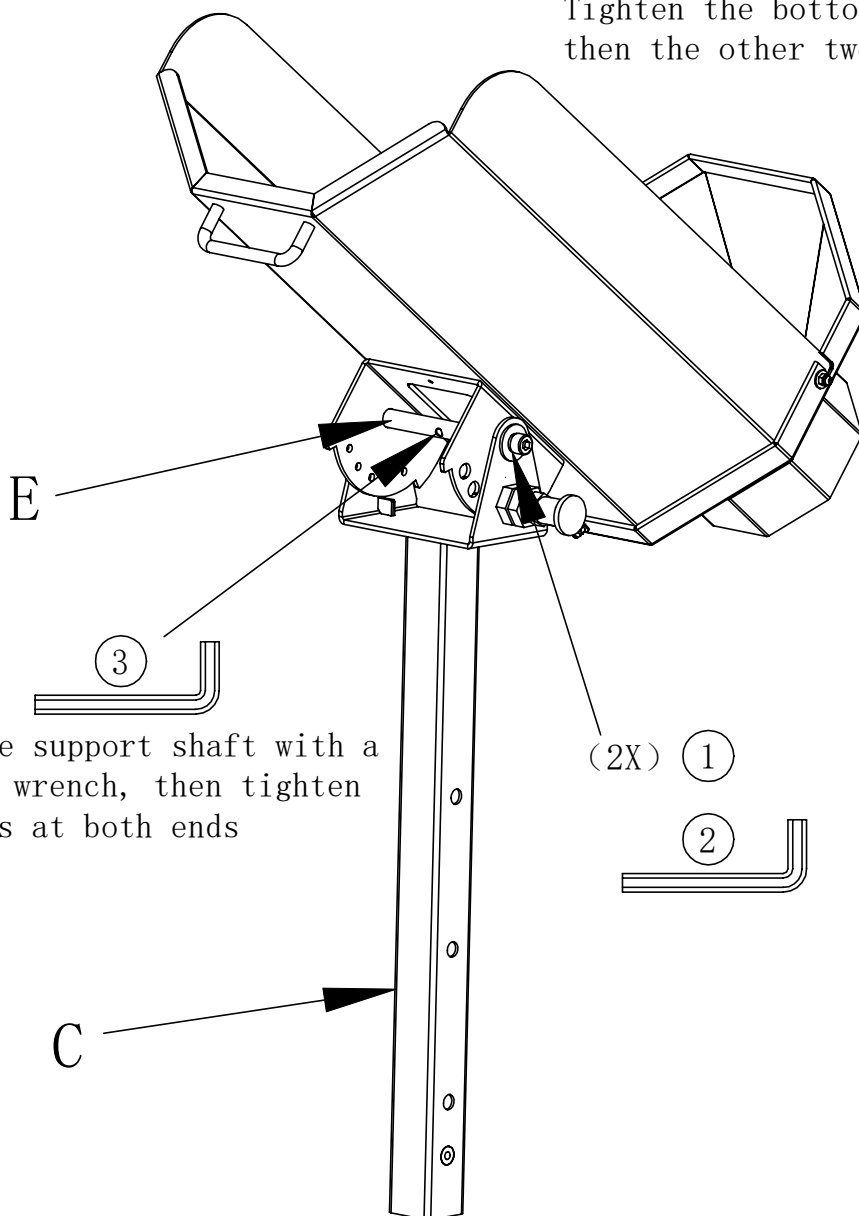

Secure the support shaft with a
3mm Allen wrench, then tighten
the screws at both ends

5

Pull the indexing pin to make the neck swing.
There are five angles available for use:
 -45° ; -22.5° ; 0° ; 22.5° ; and 45°

Rotate the handle to allow
the bracket to extend and
retract and screw it back
to fix the height you want

When you want to adjust the height
of the bracket, loosen the screws.
After determining the corresponding
height, screw them back in

